


INSTRUCTIONS



REMOVE CAP AND SEAL FROM SUPER MIRACLE® BUBBLES 4OZ BOTTLE. TWIST AND SECURE BOTTLE INTO OPENING UNDERNEATH ENDLESS BUBBLES® II BARREL.

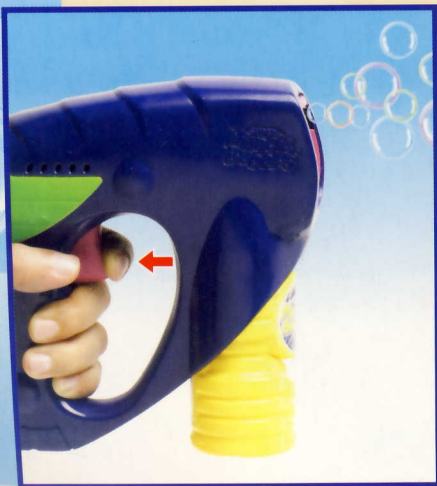

SQUEEZE AND HOLD TRIGGER SLOWLY AS SOLUTION FEEDS INTO ENDLESS BUBBLES® II. CONTINUE TO SQUEEZE TRIGGER SO THAT ENOUGH SOLUTION MAY FILL ENDLESS BUBBLES® II WAND. AFTER AT LEAST A MINUTE, ENDLESS BUBBLES® II WILL BE READY TO MAKE TONS OF BUBBLES! CONTINUE TO PULL TRIGGER SLOWLY AND HOLD TO ENSURE NEVER-ENDING BUBBLE STREAM!



TO KEEP YOUR ENDLESS BUBBLES® II AT ITS BEST, BE SURE TO RINSE WITH PLAIN WATER WHEN DONE MAKING BUBBLES!

FILL SMALL CUP WITH WATER. INSERT FEEDER TUBE INTO WATER AND PULL TRIGGER SO THAT WATER WILL FILL ENDLESS BUBBLES® II AND WASH OUT EXCESS SOLUTION.

BATTERY INSTALLATION & REPLACEMENT



INSERT BATTERIES INTO SIDE OF TINY ENDLESS BUBBLES®

ITEM WILL NOT WORK IF BATTERIES ARE INSERTED INCORRECTLY. IF ITEM DOES NOT WORK, REVERSE BATTERY DIRECTION AND TRY AGAIN.

TO INSTALL, REMOVE OR REPLACE BATTERIES: Remove screw and battery compartment cover and install, remove or replace 2 AA BATTERIES following the position indicated. Replace the battery compartment cover and screw.



WARNING:

Replacement of batteries should be done by an adult. Do not mix old batteries and new batteries. Do not mix alkaline, standard or rechargeable batteries. Do not dispose of batteries in fire, batteries may explode or leak. Do not attempt to open battery outer casing.

READ INSTRUCTIONS CAREFULLY BEFORE INSERTING OR REPLACING BATTERIES. REPLACEMENT OF BATTERIES SHOULD BE DONE BY AN ADULT. SWITCH TOY OFF BEFORE INSERTING OR REPLACING BATTERIES. NON-RECHARGEABLE BATTERIES ARE NOT TO BE RECHARGED. RECHARGEABLE BATTERIES ARE TO BE REMOVED FROM THE TOY BEFORE RECHARGING. RECHARGEABLE BATTERIES ARE ONLY TO BE CHARGED UNDER ADULT SUPERVISION. DIFFERENT TYPES OF BATTERIES OR NEW AND USED BATTERIES ARE NOT TO BE MIXED. ONLY BATTERIES OF THE SAME OR EQUIVALENT TYPE AS RECOMMENDED ARE TO BE USED. BATTERIES ARE TO BE INSERTED WITH THE CORRECT POLARITY. EXHAUSTED BATTERIES ARE TO BE REMOVED FROM THE TOY. THE SUPPLY TERMINALS ARE NOT TO BE SHORT-CIRCUITED. ATTENTION TO PARENTS: ANY BATTERY CHARGER TO BE USED WITH THE TOY SHOULD BE REGULARLY EXAMINED FOR POTENTIAL HAZARDS, SUCH AS DAMAGE TO THE CABLE OR CORD, PLUG, ENCLOSURE OR OTHER PARTS, AND THAT, IN THE EVENT OF SUCH DAMAGE, THE TOY MUST NOT BE USED UNTIL THAT DAMAGE HAS BEEN PROPERLY REMOVED. BATTERIES ARE HARMFUL IF SWALLOWED, SO KEEP AWAY FROM YOUNG CHILDREN. PLEASE RETAIN THIS PACKAGING FOR FUTURE REFERENCE.

