

PULSE GENERATOR

SQUIRTS UP TO 25 FEET!




LARGE WATER TANK

DISCOVER OTHER

SQUIRTS UP TO 25 FEET!

BATTERY REPLACEMENT

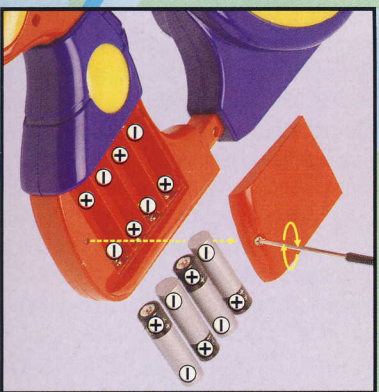

TO INSTALL, REMOVE OR REPLACE BATTERIES, Remove the battery compartment cover and install, remove or replace 4 AA BATTERIES following the position indicated. Replace the battery compartment cover and screw.

⚠ WARNING:

Replacement of batteries should be done by an adult. Do not mix old batteries and new batteries. Do not mix alkaline and rechargeable batteries. Do not mix different types of batteries. Do not attempt to open battery other casing.

READ INSTRUCTIONS CAREFULLY BEFORE INSERTING OR

REPLACING BATTERIES. ALWAYS SHOULD BE DONE BY AN ADULT.

Remove the battery compartment cover and install, remove or replace 4 AA BATTERIES

following the position indicated. Replace the battery compartment cover and screw.

DO NOT MIX OLD BATTERIES AND NEW BATTERIES. DO NOT MIX ALKALINE

AND RECHARGEABLE BATTERIES. DO NOT MIX DIFFERENT TYPES OF BATTERIES.

DO NOT ATTEMPT TO OPEN BATTERY OTHER CASING.

DIFFERENT TYPES OF BATTERIES OR NEW AND USED BATTERIES

ONLY BATTERIES OF THE SAME OR EQUIVALENT TYPE AS

EXHAUSTED BATTERIES ARE TO BE REMOVED FROM THE TOY.

ATTENTION TO PARENTS: ANY BATTERY CHARGER TO BE USED

WARRANTS, SUCH AS DAMAGE TO THE CABLE OR CONDU PLUGS,

EMULSIONS OR OTHER PARTS, AND THAT IN THE EVENT OF SUCH

BEING PROPERLY REMOVED, CHARGERS, DO NOT BE USED BY

YOUNG CHILDREN. PLEASE REFINISH THIS PACKAGING FOR FUTURE

REFERENCE.