




# INSTRUCTIONS

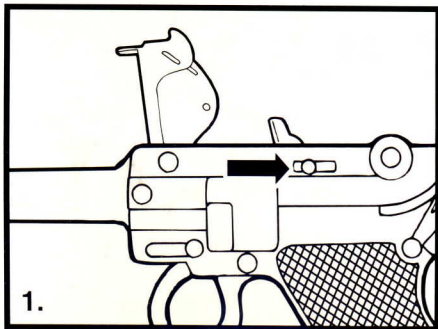


To Load Caps: Pull back knob to dispense the chamber.

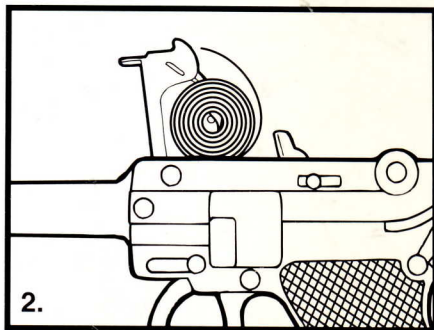


Insert Sure Shot® 50 Roll Caps into the chamber. Feed the roll caps upwards.

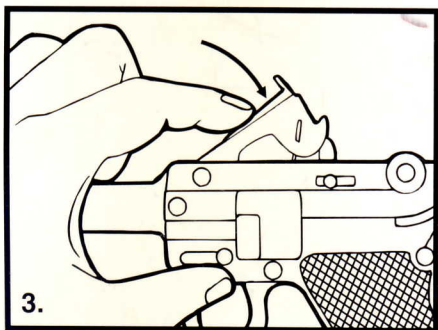

Push chamber back into the gun.

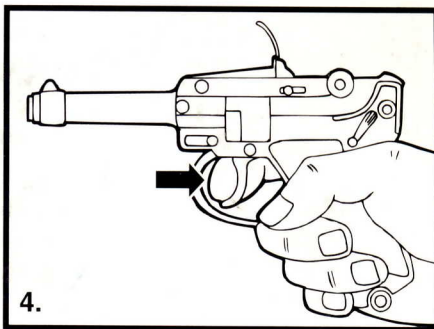

Now you are ready to start firing!

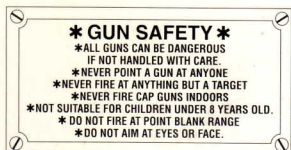

## SAFETY INSTRUCTIONS

### WARNING:

CAPS AND TOY GUNS MAY BE HAZARDOUS IF MISUSED.  
THESE SHOULD ONLY BE USED UNDER  
ADULT SUPERVISION. DO NOT FIRE INDOORS.  
DO NOT FIRE NEAR EYES, EARS OR BODY.  
DO NOT CARRY CAPS LOOSE IN A POCKET.  
EACH CAP CONTAINS LESS THAN 0.002 GRAINS OF POWDER.

CONTAINS TOY GUN  
NOT FOR SALE IN  
NEW YORK