


INSTRUCTIONS



SINGLE SHOT ACTION:
Pull Trigger to fire
a single shot.

**SINGLE SHOT TRIGGER
OR
RAPID FIRE PUMP**




RAPID FIRE ACTION:
Pump rapidly for multiple cap fire action!

SURE SHOT® PAPER ROLL CAPS RECOMMENDED

Loading Instructions:

1. Slide up silver plate.
2. Insert roll on post inside gun.
3. Thread caps through metal channel.
4. Pull back hammer and thread caps through.

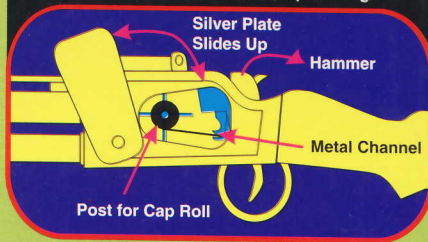

GUN SAFETY

- *ALL GUNS CAN BE DANGEROUS IF NOT HANDLED WITH CARE.
- *NEVER POINT A GUN AT ANYONE
- *NEVER FIRE AT ANYTHING BUT A TARGET
- *NEVER FIRE CAP GUNS INDOORS
- *NOT SUITABLE FOR CHILDREN UNDER 8 YEARS OLD.
- *DO NOT FIRE AT POINT BLANK RANGE
- *DO NOT AIM AT EYES OR FACE.

(ROLL CAP) SAFETY INSTRUCTIONS

WARNING:

CAPS AND TOY GUNS MAY BE HAZARDOUS IF MISUSED. THESE SHOULD ONLY BE USED UNDER ADULT SUPERVISION. DO NOT FIRE INDOORS. DO NOT FIRE NEAR EYES, EARS OR BODY. DO NOT CARRY CAPS LOOSE IN A POCKET. EACH CAP CONTAINS LESS THAN 0.002 GRAINS OF POWDER.

Caution: This product can be mistaken for a real firearm by law enforcement officers or others. Altering the coloring or markings on this item to make this item look like a real firearm is dangerous and may be a crime, and brandishing or displaying such an altered item in public may cause confusion, may be a crime and can be dangerous.

**CONTAINS TOY GUN
NOT FOR SALE IN
NEW YORK**