 
 



INSTRUCTIONS

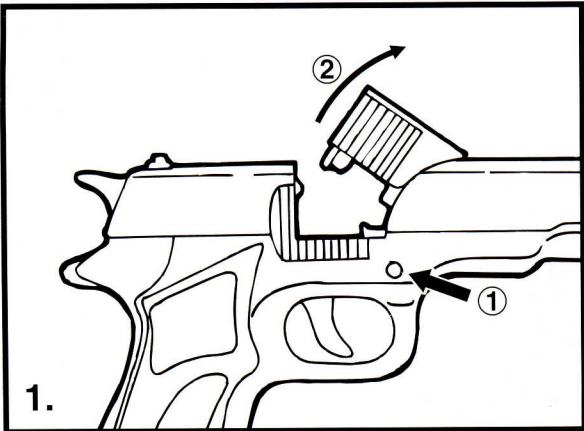

To Load Cap: Press button on the right hand side of the gun, chamber will automatically open.

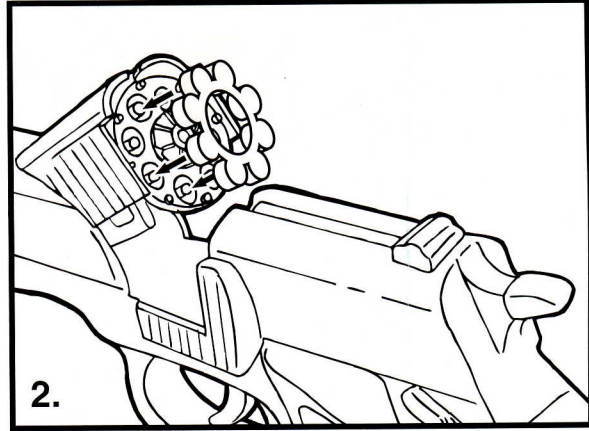

 Place ring in cylinder. Return chamber to locked position.

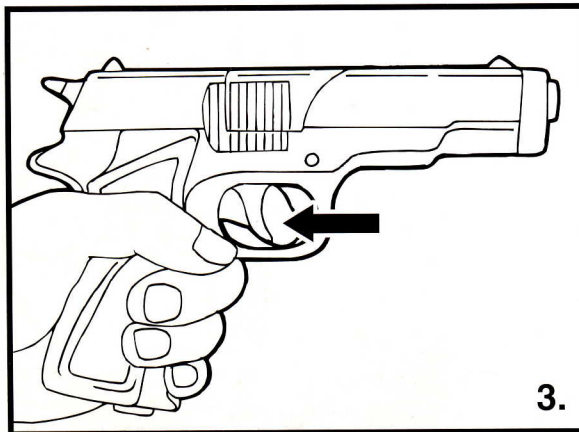

Now you are ready to start firing!

**CONTAINS TOY GUN
NOT FOR SALE IN
NEW YORK**

Caution: This product can be mistaken for a real firearm by law enforcement officers or others. Altering the coloring or markings on this item to make this item look like a real firearm is dangerous and may be a crime, and brandishing or displaying such an altered item in public may cause confusion, may be a crime and can be dangerous.

*** GUN SAFETY ***
*ALL GUNS CAN BE DANGEROUS
IF NOT HANDLED WITH CARE.
*NEVER POINT A GUN AT ANYONE
*NEVER FIRE AT ANYTHING BUT A TARGET
*NEVER FIRE CAP GUNS INDOORS
*NOT SUITABLE FOR CHILDREN UNDER 8 YEARS OLD.
* DO NOT FIRE AT POINT BLANK RANGE
*DO NOT AIM AT EYES OR FACE.

SAFETY INSTRUCTIONS WARNING:

**CAPS AND TOY GUNS MAY BE HAZARDOUS IF MISUSED.
THESE SHOULD ONLY BE USED UNDER
ADULT SUPERVISION. DO NOT FIRE INDOORS.
DO NOT FIRE NEAR EYES, EARS OR BODY.
DO NOT CARRY CAPS LOOSE IN A POCKET.
EACH CAP CONTAINS LESS THAN 0.002 GRAINS OF POWDER.**