


LEGENDS OF THE WILD WEST®

Instructions

STEP 1.

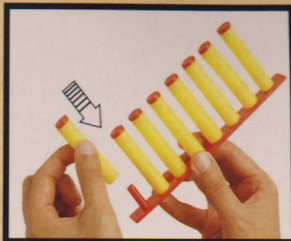

LOAD STICKY TIP
FOAM DARTS ONTO CLIP

STEP 2.



INSERT CLIP WITH STICKY TIP FOAM
DARTS INTO BOWS' UPPER SLOT

STEP 3.



SLIDE CLIP DOWNWARD UNTIL
CLIP CLICKS INTO POSITION
JUST ABOVE BOWS AIR RING

STEP 4.



FIRMLY PULL BACK ON BOWS'
ARROW TO LOAD, CLIP WILL
AUTOMATICALLY ADVANCE,
RELEASE TO SHOOT.

STEP 5.



FOR CONSTANT RAPID FIRE
ACTION CONTINUOUSLY PULL
& RELEASE BOWS' ARROW,
DART WILL FIRE AND CLIP WILL
AUTOMATICALLY RELOAD.

Become a legend of your own with
Legends of the Wild West®
Replica Series Big Horn Archery Set!

BOW SAFETY

- *ALL BOWS CAN BE DANGEROUS IF NOT HANDLED WITH CARE.
- *NEVER POINT OR SHOOT A BOW AT ANYONE.
- *NEVER FIRE AT ANYTHING BUT A TARGET.
- *DO NOT SHOOT ANY OBJECT EXCEPT THE DARTS DESIGNED FOR THIS BOW.
- *DO NOT FIRE AT POINT BLANK RANGE.
- *DO NOT AIM AT EYES OR FACE.

CAUTION: DO NOT PULL THE CLIP UPWARDS AS IT WILL DAMAGE THE CLIP-LOADING MECHANISM. ALWAYS ADVANCE THE CLIP DOWNWARD BY REPEATING STEP 3.